

Thank you for your purchase of Vanguard Furniture.



VANGUARD®  
FURNITURE


# W717BC Bar Cabinet

## Assembly Instructions

Two Person Assembly Required

### HARDWARE PACKAGE

NO.	DESCRIPTION	Q'TY
A	Wood Screw #8x1-1/4"	14

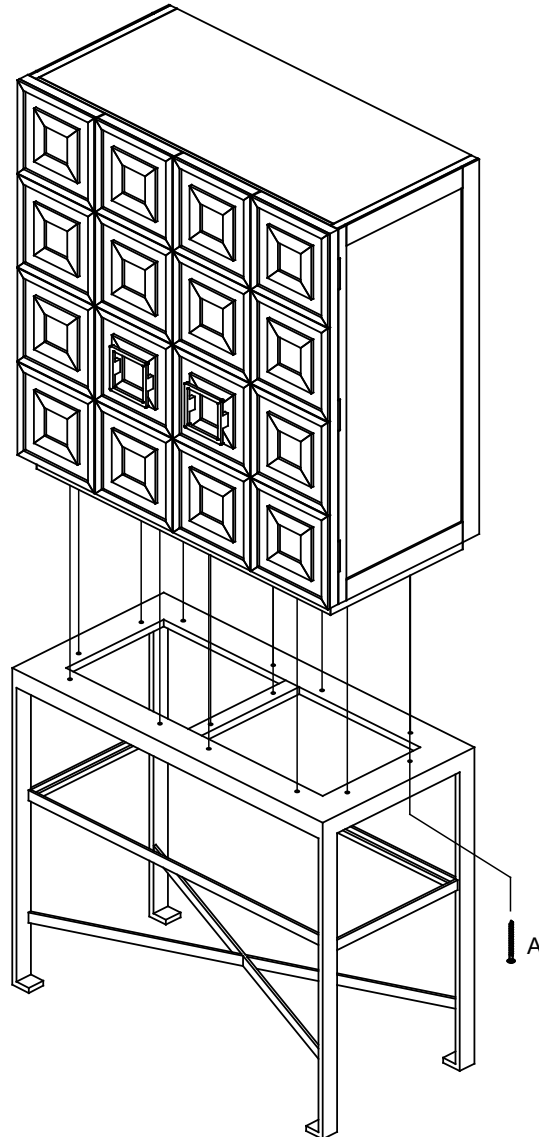

- 1) Place base on level surface.
- 2) Place and center the case on the base.
- 3) Using the provided screws, screw through the holes into the bridge.  
Repeat for the other 13 screws.