


W777B Sideboard

Assembly Instructions

Two Person Assembly Required

HARDWARE PACKAGE

NO.	DESCRIPTION	Q'TY
Α	Wood Screw #8x7/8"	23

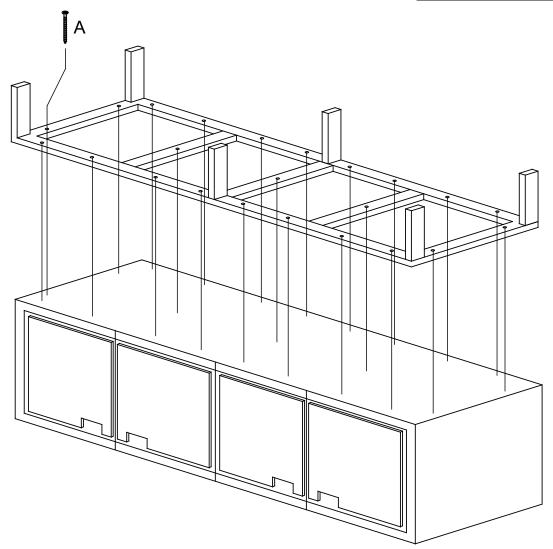

- 1) Flip the case upside down onto a soft surface, such as a blanket.
- 2) Place the base on top of the case.
- 3) Center the base on the case.
- 3) Using the provided screws, screw through the holes into the bridge. Repeat for the other 22 screws.