



Thank you for your purchase of Vanguard Furniture.

8701T Dining Table

Assembly Instructions

Two Person Assembly Required



VANGUARD®

FURNITURE



HARDWARE PACKAGE

NO.	DESCRIPTION	Q'TY
A	5/16" x 2-1/2" Bolt	8
B	5/16" x 2" Bolt	2
C	5/16" Flat Washer	10
D	M8 Lock Washer	10
E	Allen Key	1

Step 1) Assemble the base by attaching the leg assembly to the stretcher with the flat washer (C), lock washer (D), and bolt (B) using the allen wrench (E) provided and cover with decorative finial cap. Repeat on opposite end to complete base assembly.

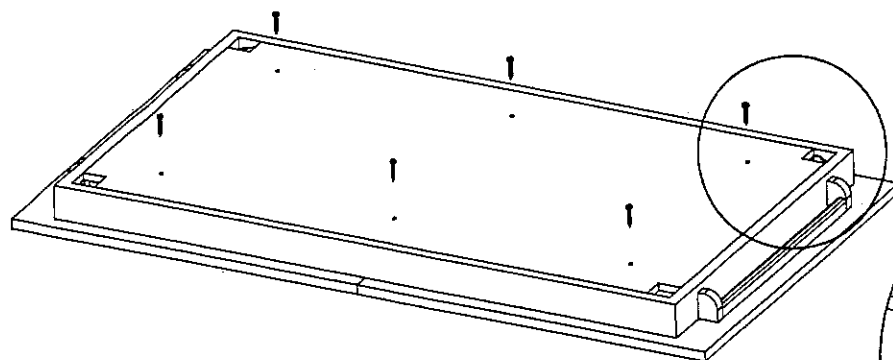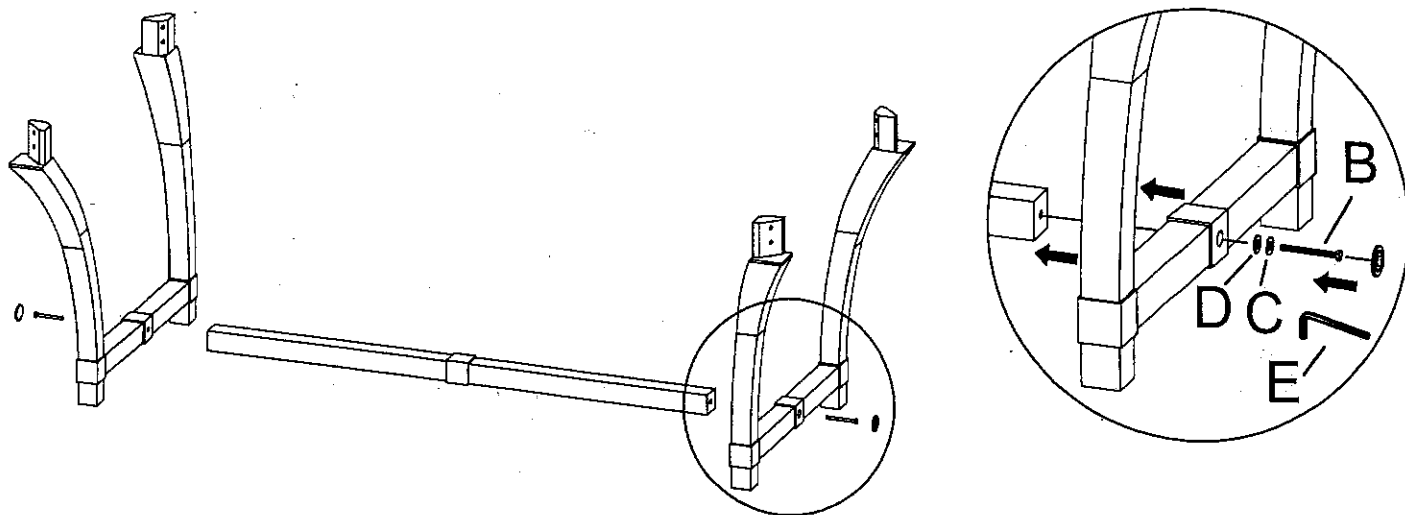


Step 2) With the top laying upside down on the floor, remove the (6) screws from the bottom panel using the allen wrench (E).

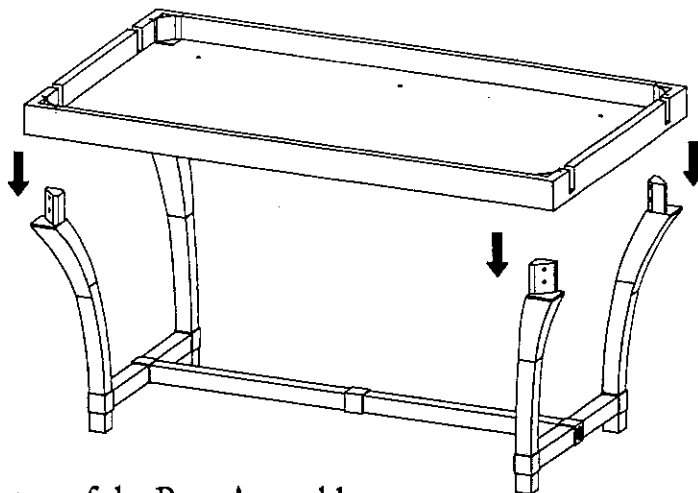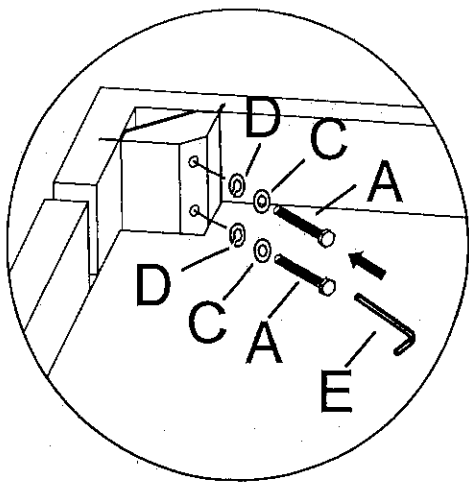



Step 3) Set the Filler Box Assembly on top of the Base Assembly.

Step 4) Insert provided flat washers (C), lock washers (D), and bolts (A) through the post and tighten with the allen wrench (E). Repeat for other three post.

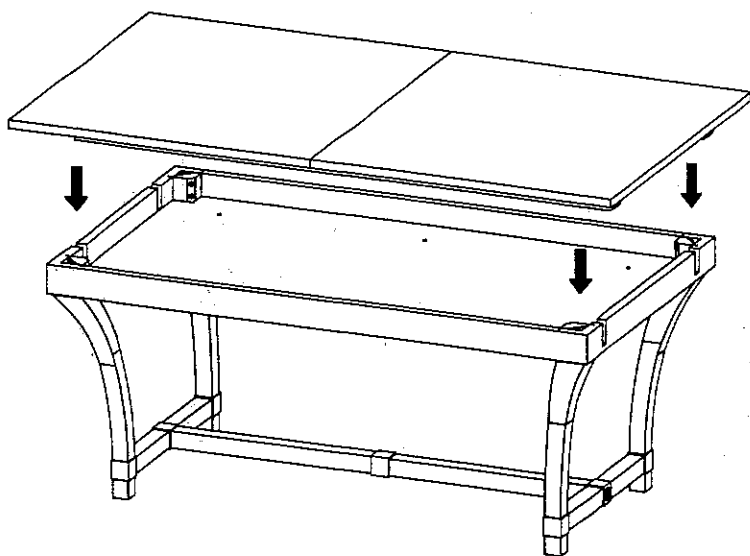

Step 5) Position Top Assembly onto the Filler Box Assembly by aligning the slides into the grooves in the end rails.

Step 6) Re-attach the screws that were removed in Step 1 on the underside of the Filler Box Assembly by using the allen wrench (E).

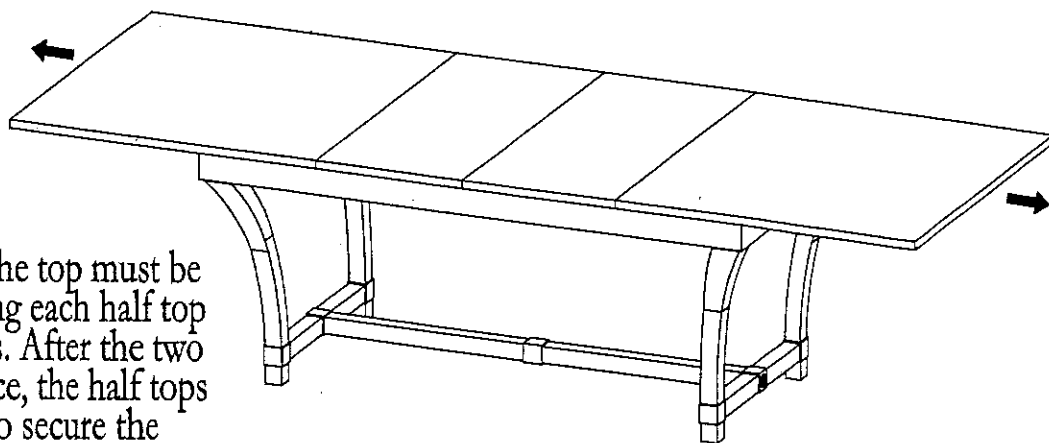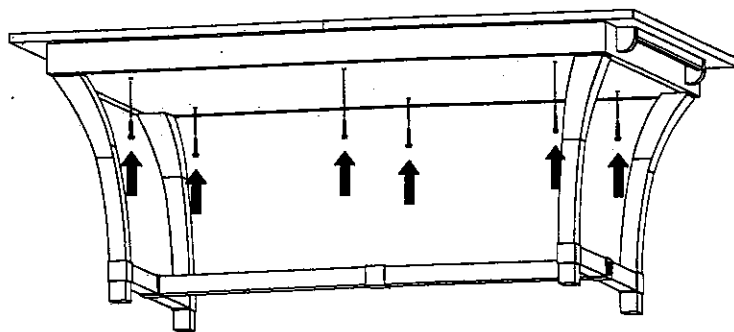

Step 7) To install the fillers, the top must be fully opened by pulling each half top in opposite directions. After the two fillers are set into place, the half tops can be pushed back to secure the fillers into position.