





VANGUARD®
FURNITURE

Thank you for your purchase of Vanguard Furniture.

CC50EG & HH60EG Series Lifestyle & Home Office Etageres

HARDWARE PACKAGE





NO.		DESCRIPTION	Q'TY
A		Wood Screw #8x1"	66
B		Wood Screw #8x1-3/4"	6
C		Mending Plate Kit	6



Assembly Instructions


Two Person Assembly Required

- 1) For the end cases with shelves, lay the metal down onto its back on a soft surface, such as a blanket or carpet.
- 2) Lay the back of the case onto the metal and position it against the plinth base. Make sure that the overhang on each end is the same distance.
- 3) Attach the metal base to the case using the provided wood screws (A) in ten places.

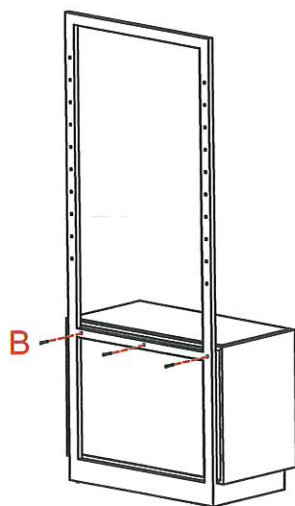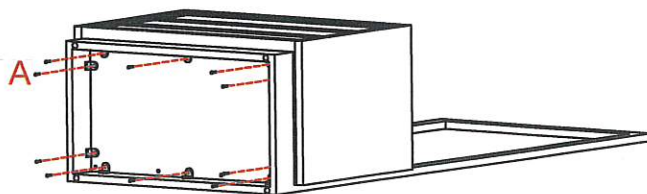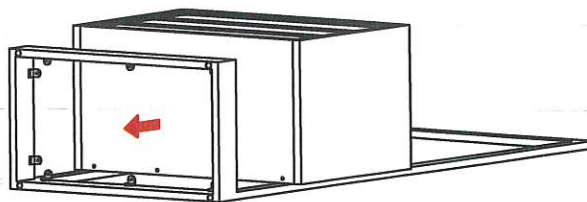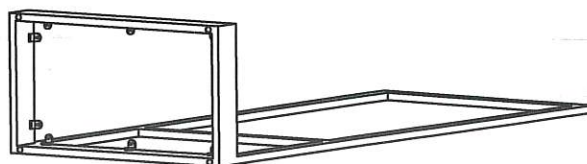


- 4) Stand the case back to the upright position. Attach the metal to the back of the case by using the provided wood screws (B).

- 5) Repeat Steps 1-4 for the two remaining case.

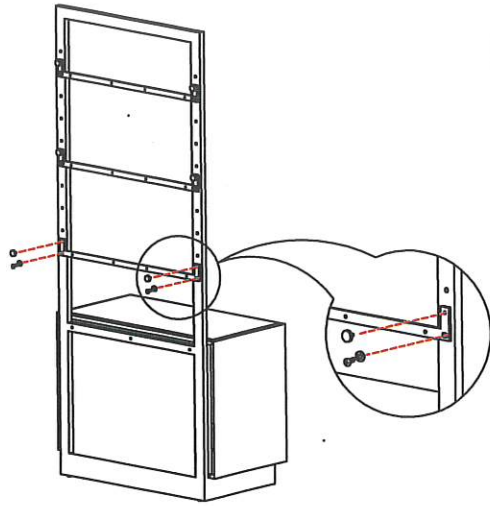


- 6) Install the Metal Shelf Back Rail by aligning it with the holes on the back of the metal upright. Using 2 of the provided Phillips Head Bolts and Washers (ⓈⓈ 6 of each included with each shelf), secure the Metal Shelf Back Rail through the bottom hole on each end. Do not tighten completely so the shelf can be leveled in Step 14B. Repeat for the two remaining Metal Shelf Back Rails.

- 7) Install the Palm Grip Knobs (● 2 included with each shelf) in the top hole on each tab. This will be used in Step 14B when leveling the Metal Shelves. Repeat for the two remaining Metal Shelf Back Rails.

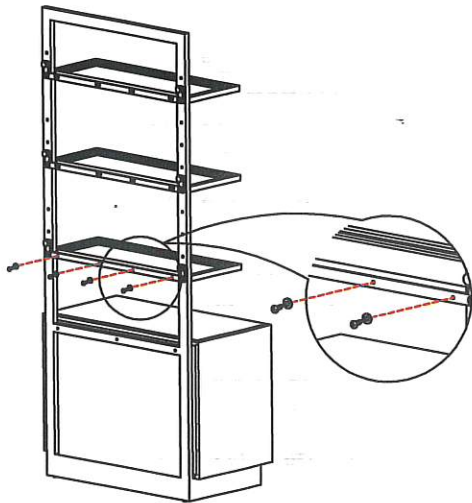

- 8) Attach the Metal Shelf by aligning it with the holes on the Metal Shelf Back Rail. Using the remaining provided Phillips Head Bolts and Washers from Step 6, secure the shelf in four locations. Repeat for the two remaining Metal Shelves.

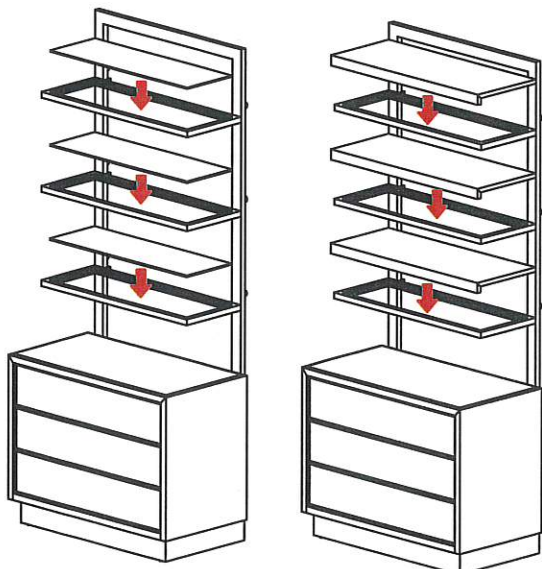


9A) Glass Shelves

9B) Wood Shelves


- 9A) For Glass Shelves, lay the glass into the rab on each Metal Shelf. Repeat for the remaining two Glass Shelves.

OR


- 9B) For Wood Shelves, lay the Wood Shelf onto the Metal Shelf. The Wood Shelf should set against the metal uprights and flush with the Metal Shelf on both ends. Repeat for the remaining two Wood Shelves.

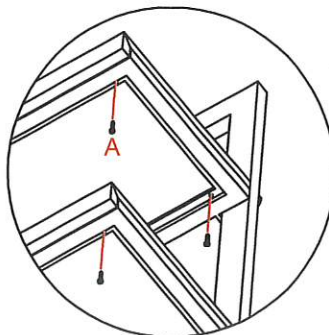

- 10) To secure the Wood Shelves, use the provided wood screws (A) and attach through the rab in six places per shelf. Repeat Step 10 for the remaining two Wood Shelves on each case.

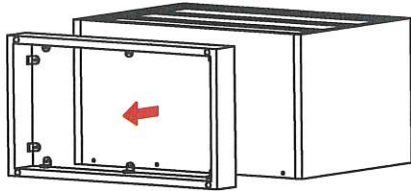

11) Lay the center case without the shelves onto its back and position the metal base flush with the back of the case and make sure the overhang is the same distance on each end.

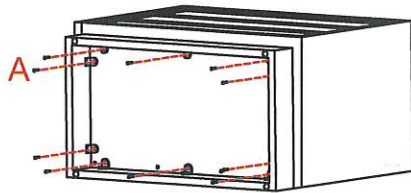


12) Attach the metal base to the case using the provided wood screws (A) in ten places.



13) Stand the case back to the upright position.

14A) Slide the three assembled cases together and align the back edges of each case. Using a level, adjust the adjustable glides on each base until all three cases are level. Additional instructions are available on the Vanguard website.

14B) After the cases are level, repeat the same process to level the shelves. The shelves can be adjusted by using the Palm Grip Knob that was installed in Step 6. Once the shelves are level, tighten the screw below the Palm Knob to fully secure the Metal Shelf.

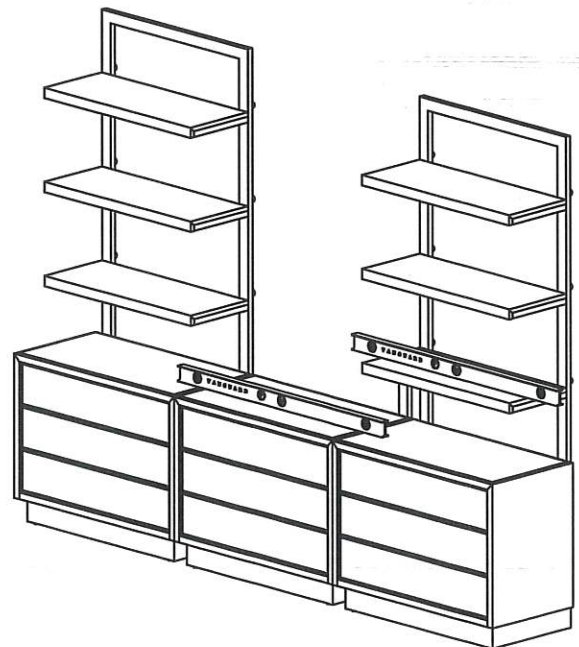

15) Lay the Top Panel directly onto the top of the cases. Ensure the top sets against the metal uprights and the overhang is the same distance on each end.

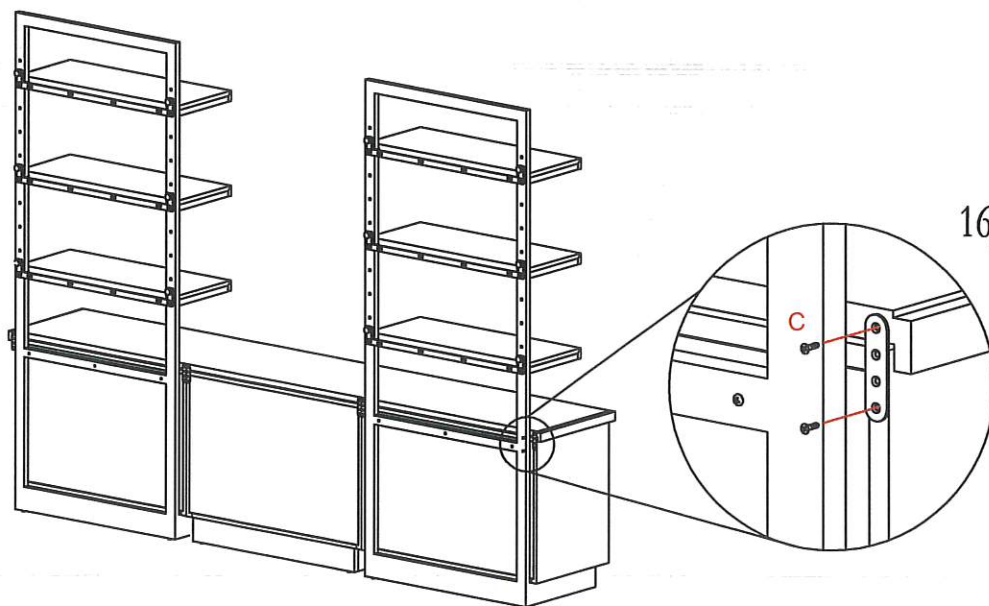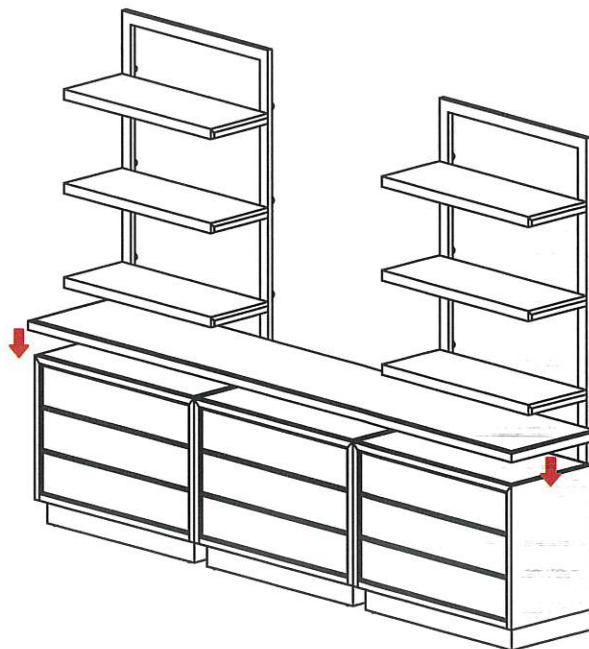

16) Using the provided Mending Plate Kit (C), secure the Top Panel to the cases in six places.

FINAL ASSEMBLY

