

VI731K-HF ANDERKIT BED ASSEMBLY INSTRUCTIONS



2 Poster Bed












Canopy Bed




4 Poster Bed

HARDWARE LIST

A		MACHINE BOLT	8 PCS.
B		NUT	8 PCS.
C		WASHER	8 PCS.
D		SCREW	6 PCS.
E		SLAT LEG	3 PCS.
F		METAL CANOPY	1 PC.
G		FINIAL (USE 2 ON HDBD FOR 2 POSTER BED OR USE 4 FOR A 4 POSTER BED)	4 PCS.
H		FOOTBOARD FINIAL (USE ON FTBD FOR 2 POSTER BED)	2 PCS.
I		FTBD FINIAL FILLER (USE ON FTBD FOR 2 POSTER BED)	2 PCS.


1. SIDE RAIL AND FOOTBOARD ATTACHMENT

1. Insert 4" threaded rods into the top and bottom holes located on the inside face of the headboard and footboard.
2. Align the threaded rods and wood alignment dowels with their corresponding holes on the end of the side rail assembly and face of headboard and footboard. Push side rail assembly against headboard and footboard and tighten in place using nuts and specialty washer.

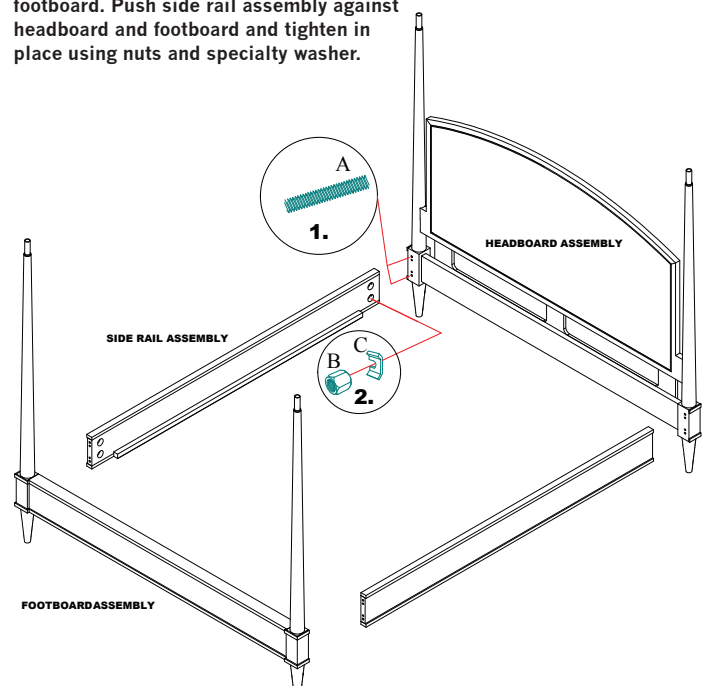


2. SLAT INSTALLATION

1. Screw leg into the center hole of the slat rail.
2. Use the 1 1/2" wood screws to fasten the three slat assemblies to the top side of the slat bearing rails located on the inside face of the side rail assembly. One in the center and the other two near the ends.

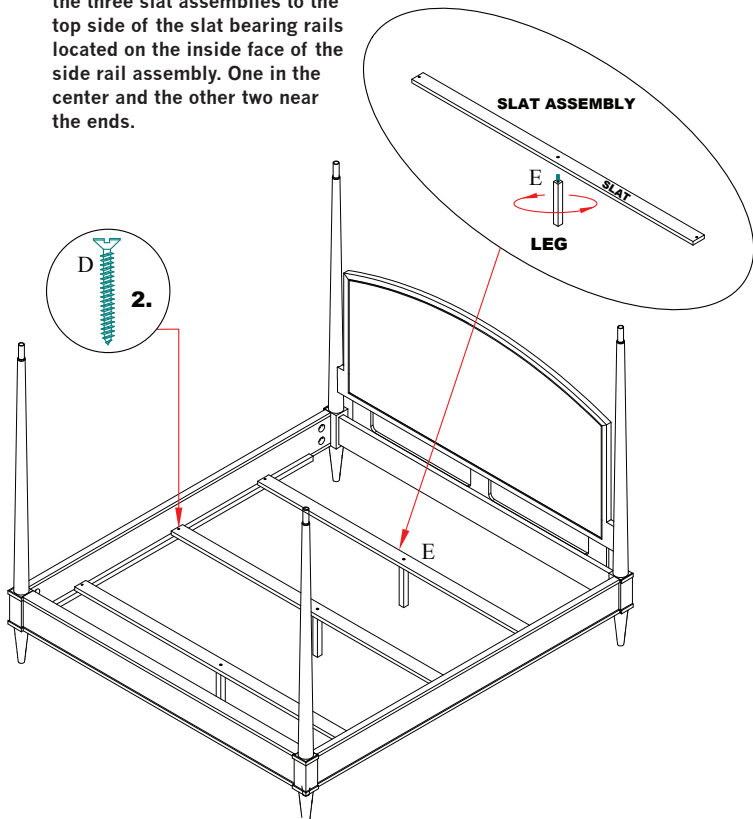


3. OPTION A - CANOPY BED

1. Assemble canopy.
2. Remove the metal piece in top of each post sleeve.
3. Take out the set screw and remove metal tube inside.
NOTE: Keep the metal tubes for future use for finials.
4. Insert canopy ends into metal sleeves on top of each post.
5. Insert and tighten set screws on each post.
6. Tighten center finial on canopy.

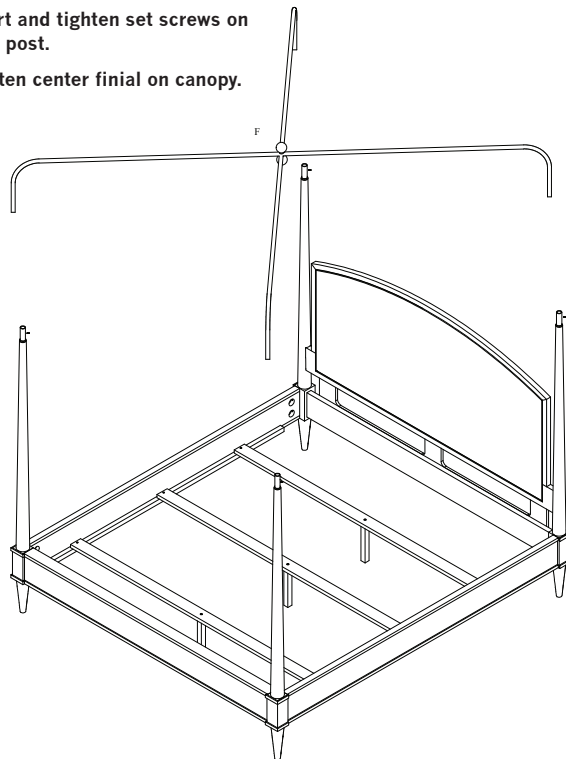

4. OPTION B - FOUR POSTER BED

1. Insert round finials into metal sleeves on top of each post.
2. Tighten set screws.

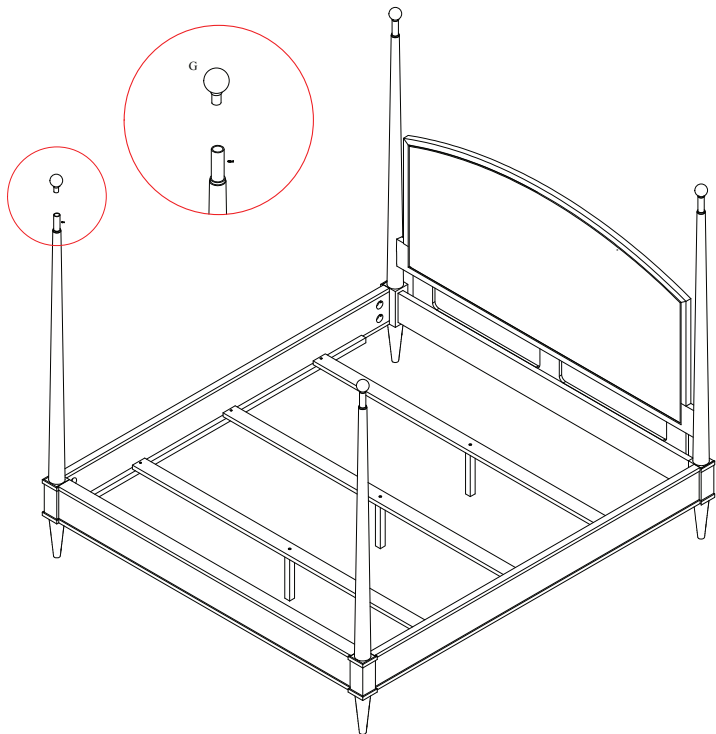

5. OPTION C - TWO POSTER BED

1. Insert 3" diameter footboard finial through wood collar into top of footboard post.
2. Turn finial clockwise until tight.

