



9527 MARSHALL BED ASSEMBLY INSTRUCTIONS

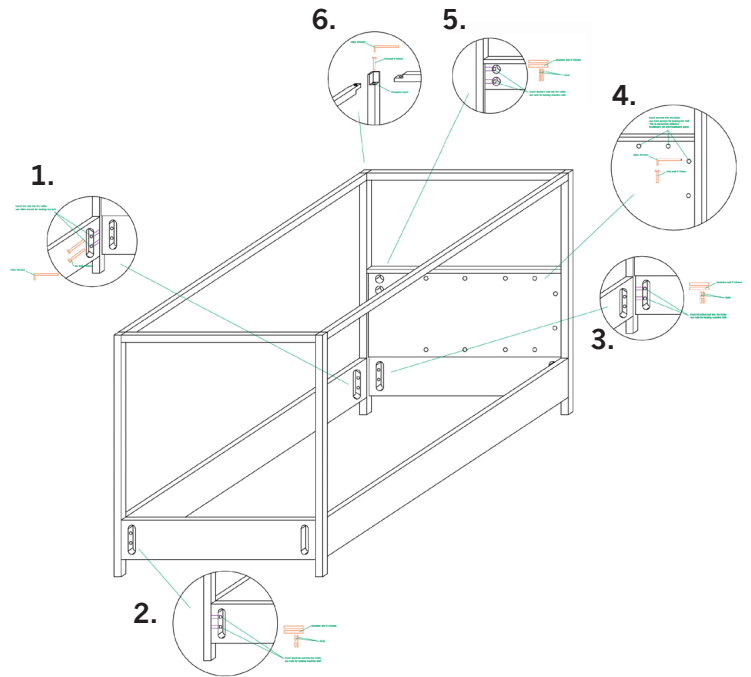


Hardware List:

- 12 pcs Machine bolt
- 8 pcs hex bolt 8*60mm
- 4 pcs hex bolt 8*80mm
- 12 pcs hex bolt 8*35mm
- 1 pc Allen wrench
- 1 pc Wrench


1. Insert hex bolt into the holds using Allen wrench for locking hex bolt.

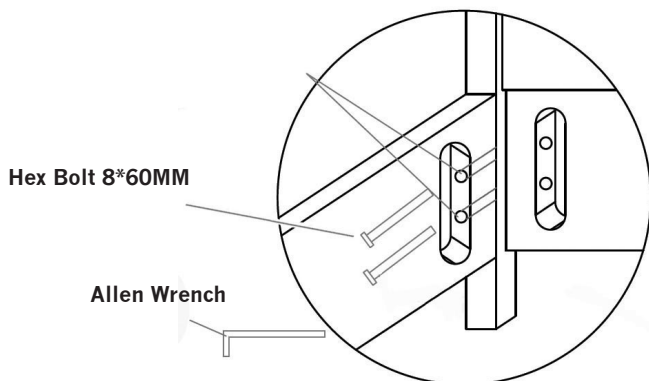


2. Insert Machine bolt into the holds. Use nuts for locking machine bolt

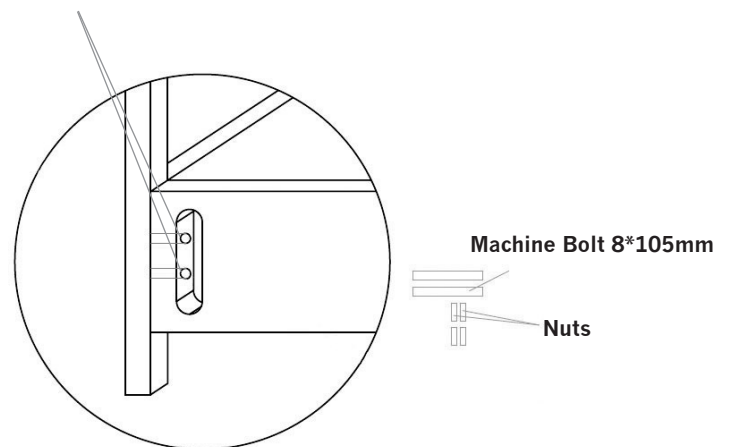


3. Insert Machine bolt into the holds. Use nuts for locking machine bolt.

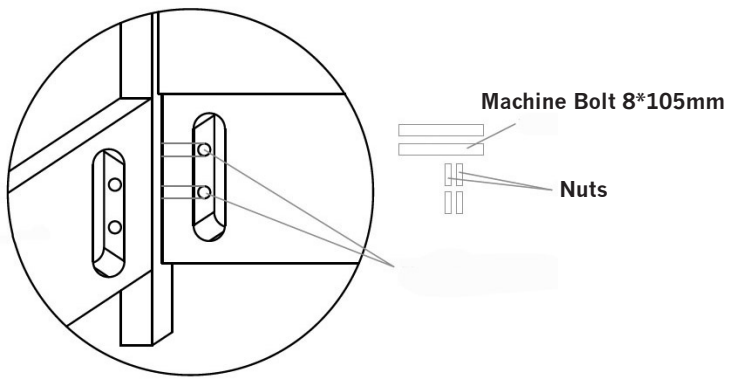

4. Insert hex bolt into the holds. Use Allen wrench for locking hex bolt. This is connection between headboard rail and headboard panel.

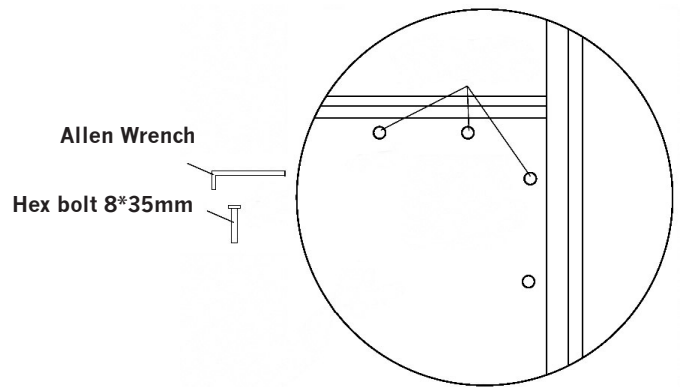

5. Insert Machine bolt into the holds. Use nuts for locking machine bolt.

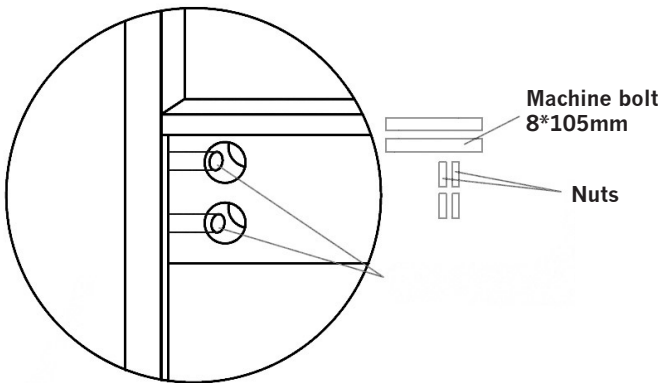

6. Insert hex bolt into threaded insert.

